




1. Choose SP_Flash_Tool_v3.1320.0.174_secureOS to execute “Flash_tool”

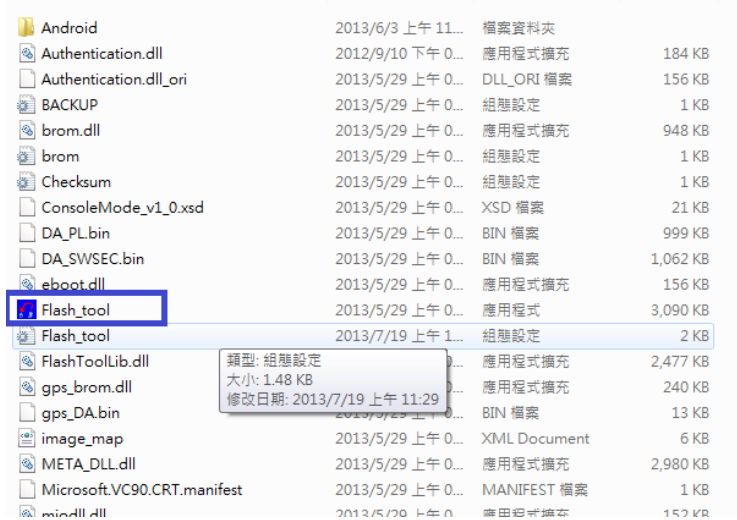


2. Choose “DA_ZSjxV_1320_20130603” for download agent.

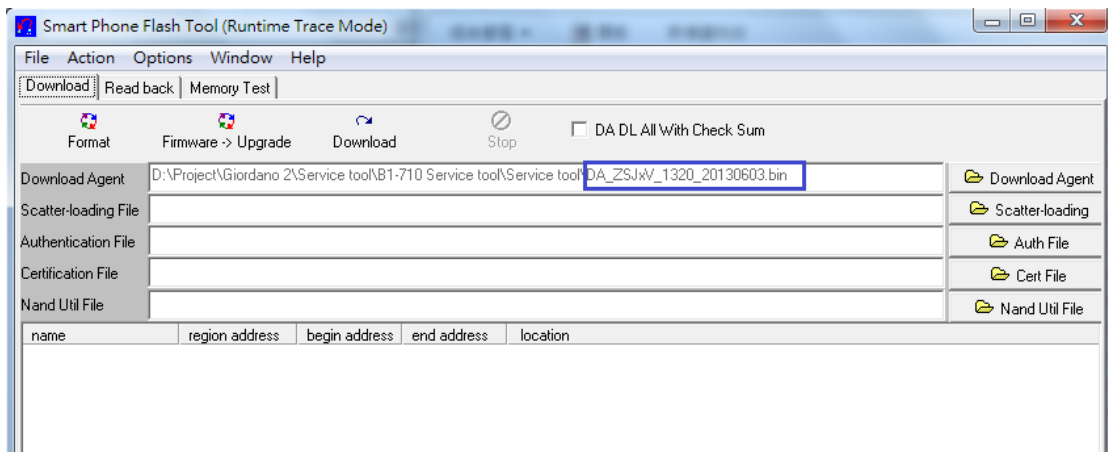

3. Choose the ship image you want and click the file of “MT6577_Android_scatter_emmc” to feed in scatter-loading. And uncheck “PRELOADER”, “DSP_BL”

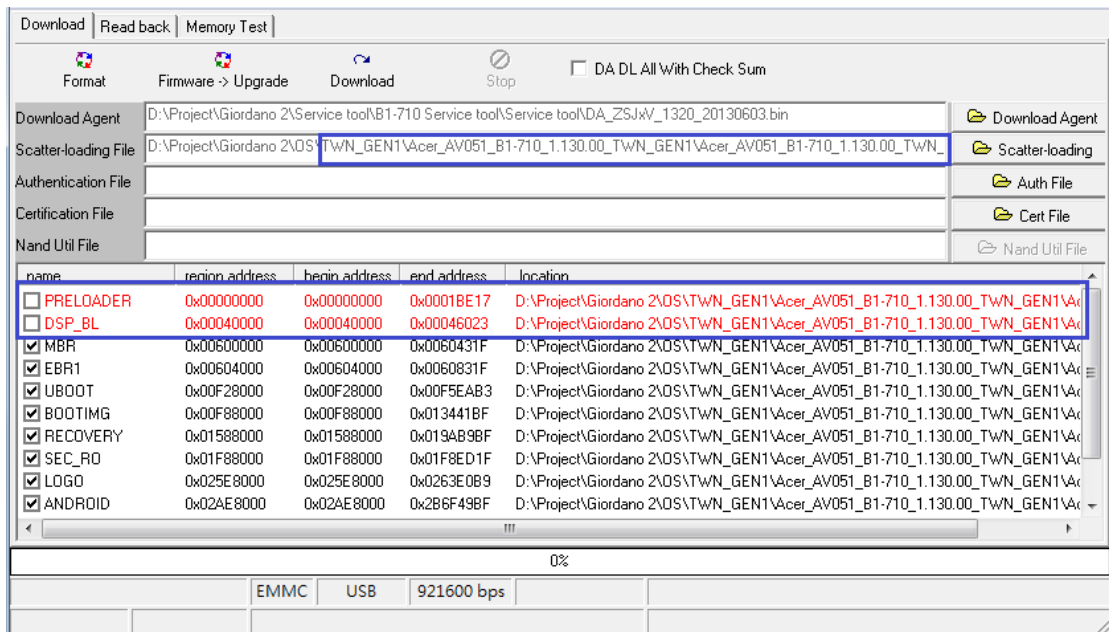

4. Click “download”.
5. Connect PC and B1-710 by USB cable.
6. Use tool put in the DUT recover button

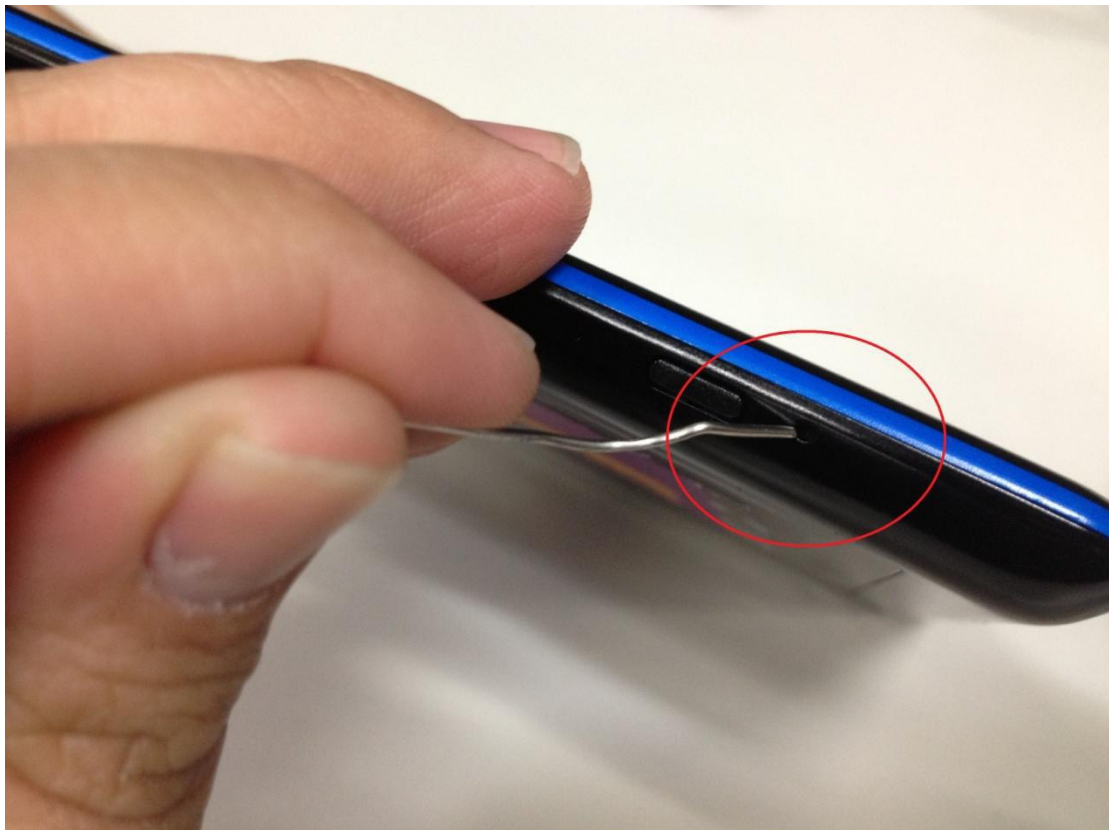

7. The image is on flash processing, when flash complete, will show "O" screen. Done.

